

FABRIC FINISHES



Performance varies dependent upon individual pattern construction. Please cross reference the symbols below each finish for application considerations.

 Suitable for external application

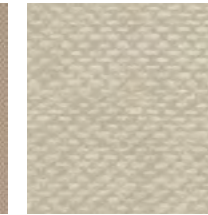
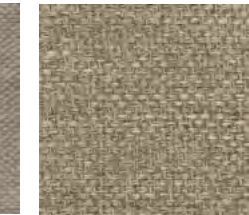
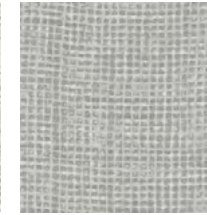
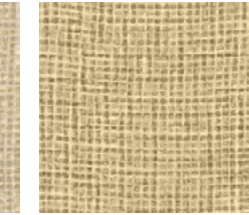
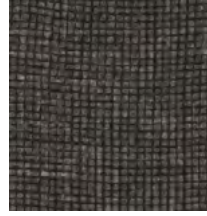
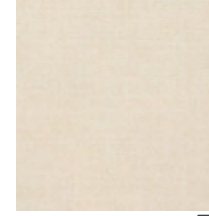
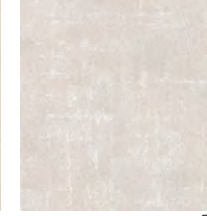
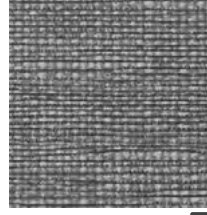
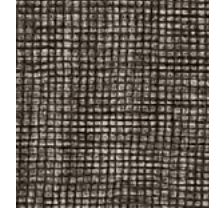
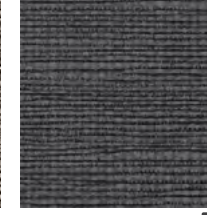
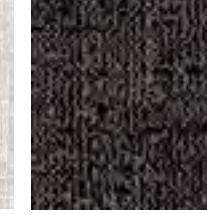
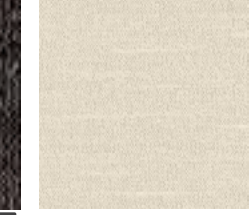
 Not recommended for use on compound curves / stretching

 Overlaps preferred, splice joints not recommended

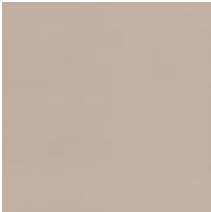
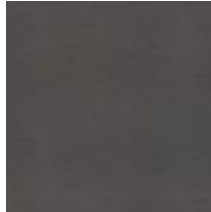
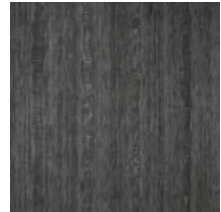
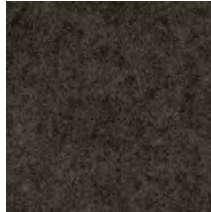


FABRIC FINISHES



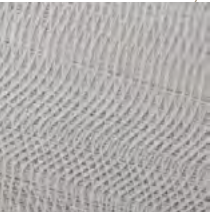
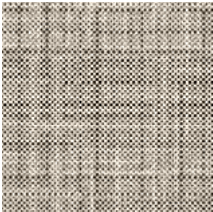
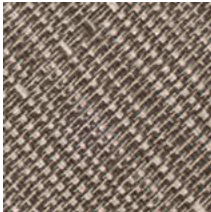
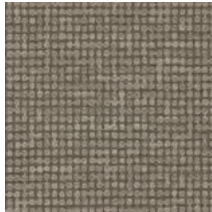
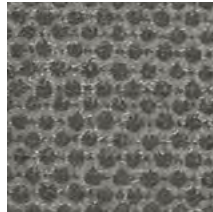
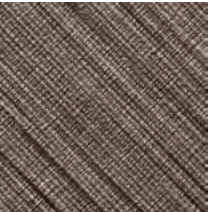
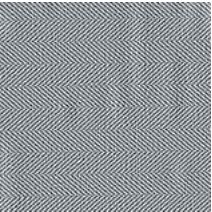
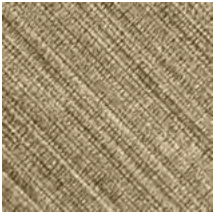
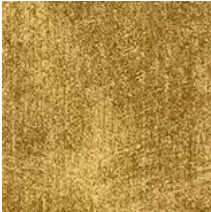
							
NU-1942 MT	FE-804	FE-805	FE-813	FE-801	NU-1934 MT	NU-1935 MT	NU-1937 MT
							
NU-1936 MT	NU-1940 MT	NU-1939 MT	NU-2002	NU-2003	NU-2008	NU-2004	NU-2011
							
NU-2005	NU-2010	NU-2009	NU-1237	NU-1793	NU-1794	NU-1239	NU-1240
							
NU-1785	NU-1788	NU-1786	NU-2001	NU-1787	NU-1795	NU-1789	SI-1686

FABRIC FINISHES

				
SI-1232	NU-2006	NU-2007	SI-1235	SI-1613
				
FE-1731	FE-1732	FE-1729	FE-1730	



FABRIC FINISHES

							
NG11	W MK18	W NE37	W NE38	W T10	W NE20	W MK21	W NE33
							
W T12	W NG07	W NG10	W T51	W AL09	W W2	W NG13	! W T7
							
! W T8							

